

RACU ACTIVATION

1. VERIFY FGB COMMAND STATUS

NOTE

RACU commands sent from Orbiter will not work if FGB relay matrix is in **MCC-M** command state (COMMANDING - INH). Crew can follow ground activities using the "If ENA" block below.

CRT

SM 204 FGB

√COMMANDING - INH

2. If COMMANDING - INH

Shuttle ↓ **MCC-H**: "Ready for RACU5(6) Power On"
MCC-H ⇒ **MCC-M**: "Go for RACU5(6) Power On"

RUSSIAN GROUND	<u>AOS</u>	<u>LOS</u>
Pass 1	___/___:___:___	___/___:___:___
Pass 2	___/___:___:___	___/___:___:___

MCC-M ⇒ **MCC-H** ↑ Shuttle: "RACU5(6) Power On at ___/___:___:___ GMT"

3. If COMMANDING - ENA

Shuttle ↓ **MCC-H**: "Ready for RACU5(6) Power On"
MCC-M ⇒ **MCC-H**: "Go for RACU5(6) Power On"
MCC-H ↑ Shuttle: "Go for RACU5(6) Power On"

On MCC GO

CRT

SM 204 FGB

PCS

nav FGB: EPS
 FGB: EPS

FGB: EPS

√FGB Main Bus Voltage 1,2 (two): 28.0 --- 29.0 V
 √FGB Batt Voltage 1 --- 6 (six) > 25.5 V

 * If any FGB Batt Voltage < 25.5 Volts, then *
 * notify **MCC**: "FGB Batteries Low." *
 * Wait one orbit for FGB batteries to charge. *

SM 210 NODE

√FRM CTR - Incrementing

If FRM CTR - Static

SM 204 FGB

RACU 5(6) PWR ON VIA FGB - ITEM 1 (ITEM 3) EXEC

√RACU 5(6) Power On - *

√Input Amps > 3.0 A

√Output Volts: 121---125 V

√Amps: 0.3 --- 10 A

NOTE

Amperage should be at 0.5 amps at power On.
Amperage could be as high as 10 amps after MDM
initialization (approximately 2.5 minutes), depending
on heater usage.

```
*****
*   If RACU 5(6) OUT AMPS > 10           *
*   RACU 5(6) PWR OFF VIA FGB - ITEM 5  *
*   (ITEM 7) EXEC                       *
*****
```

If FRM CTR - Incrementing

SM 204 FGB

RACU 5(6) PWR ON VIA NCS - ITEM 2 (ITEM 4) EXEC

√RACU 5(6) Power On - *

√Input Amps > 3.0 A

√Output Volts: 121---125 V

√Amps: 0.3 --- 10 A

NOTE

Amperage should be at 0.5 amps at power On.
Amperage could be as high as 10 amps after MDM
initialization (approximately 2.5 minutes), depending
on heater usage.

```
*****
*   If RACU 5(6) OUT AMPS > 10           *
*   RACU 5(6) PWR OFF VIA FGB - ITEM 6  *
*   (ITEM 8) EXEC                       *
*****
```

PCS

nav FGB: EPS

FGB: EPS

sel RACU Details

sel Commands

cmd FGB RACU 5(6) - On Execute

√RACU 5(6) Converter - On

√RACU 5(6) Converter Input Current > 3.0 A

√Output Current: 0.5 --- 10 A

√Voltage: 121 --- 125 V

NOTE

Amperage should be at 0.5 amps at power On.
Amperage could be as high as 10 amps after MDM
initialization (approximately 2.5 minutes), depending
on heater usage.

```
*****
* If RACU 5(6) Output Current > 10      *
*   sel  Commands                        *
*   cmd FGB RACU 5(6) - Off Execute    *
*****
```